


## A3 Motor Accessories Connections

Important:


- Disconnect Power to the motor before commencing work.
- This information is for gate technician.

- Safety Beam – (Essential)
  - Avoiding gate crashing into Vehicle
- Wired Keypad
- Wireless Keypad
- LED Flashing Light
- Backup Battery
  - Gate remains operational during power failure


## A3 Motor Connection with Safety Beam

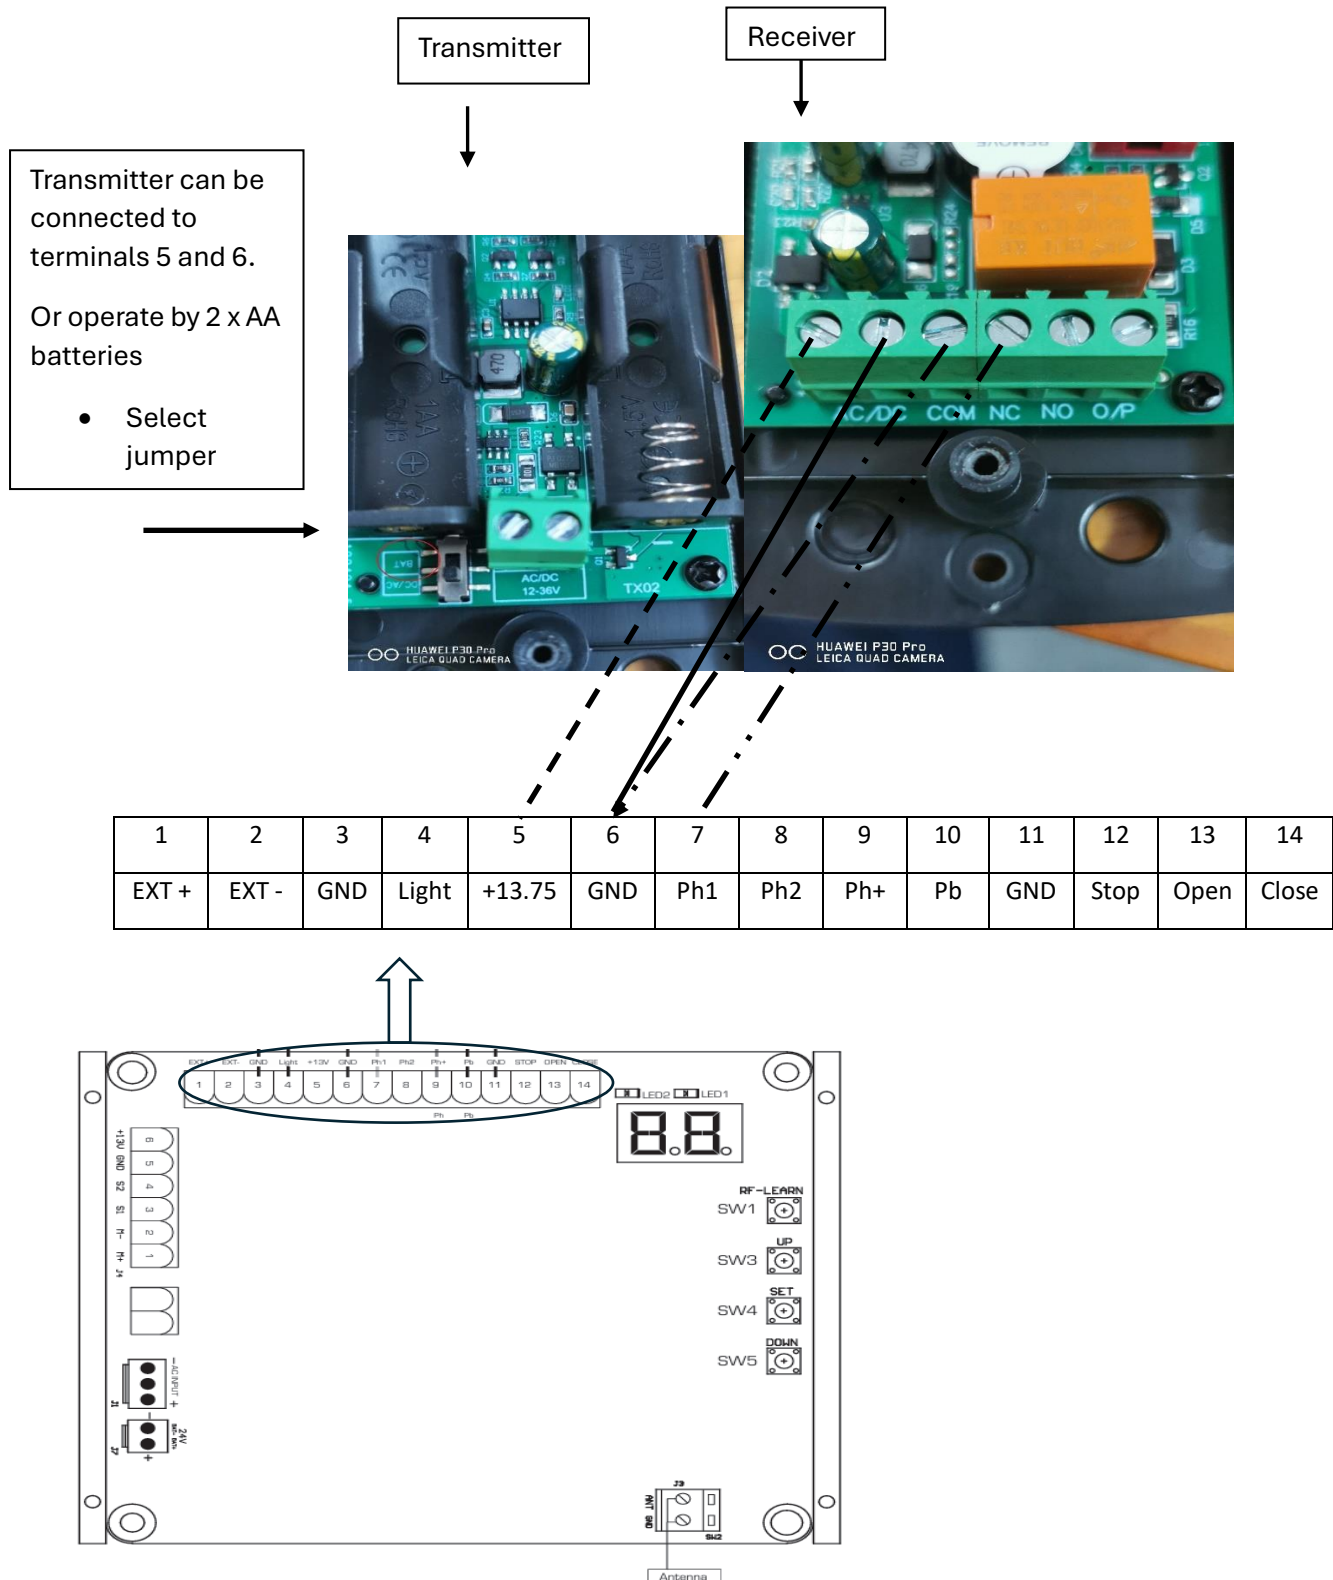

## A3 Motor Connection with wired Keypad

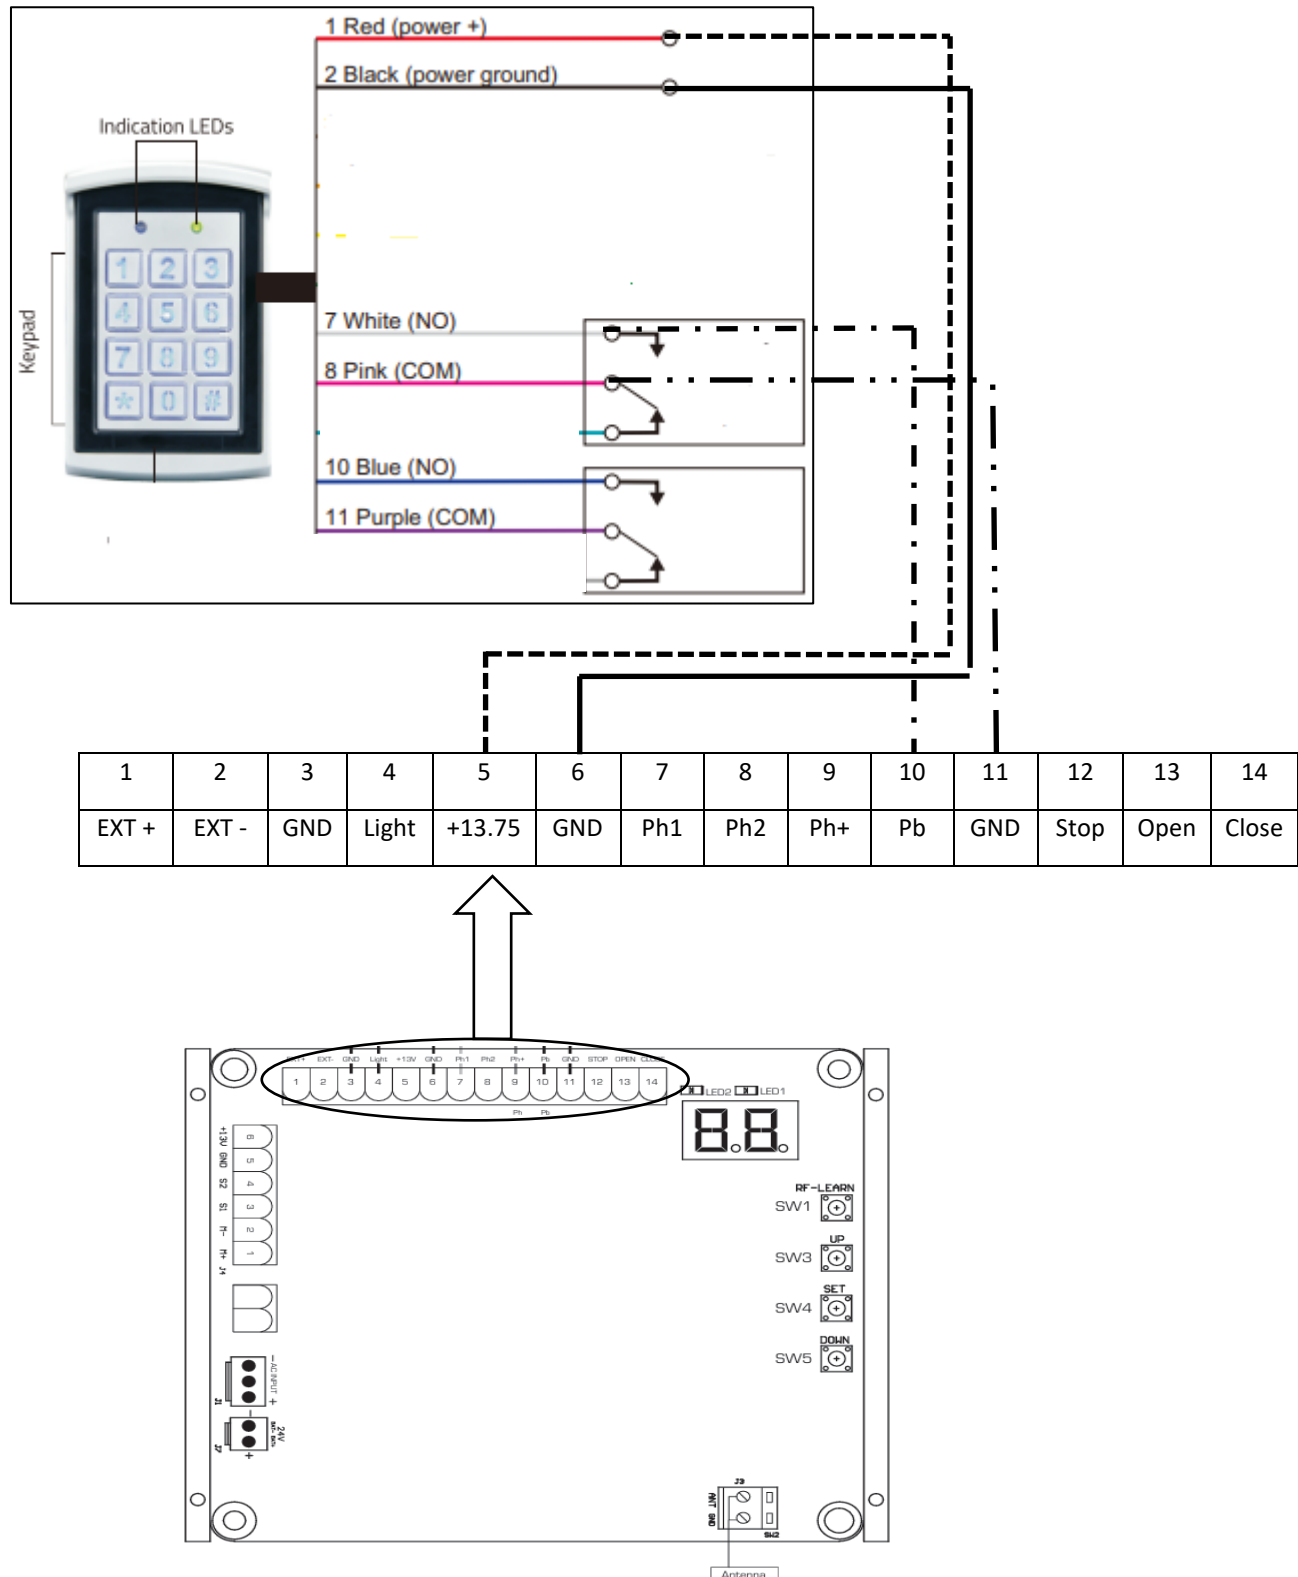


## A3 Motor connection with External Receiver for wireless Keypad

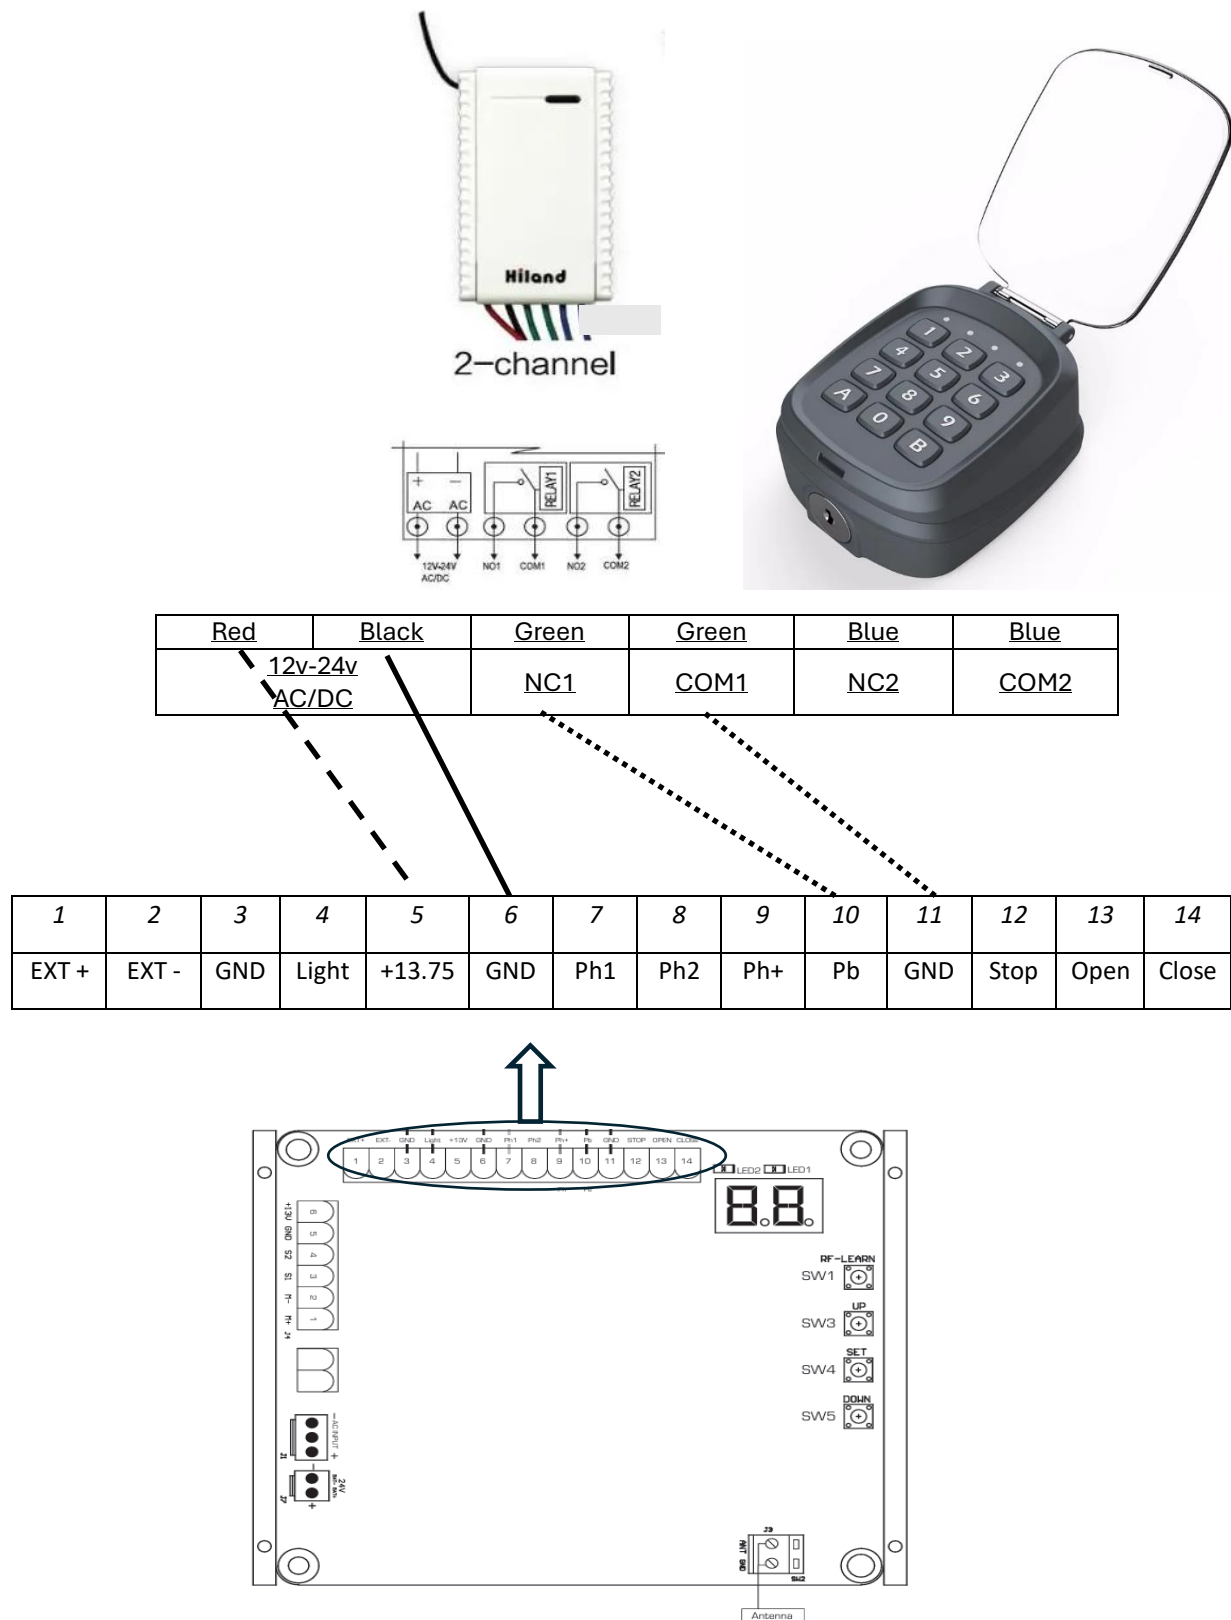

A3 Motor Connection with Flashing Light



1	2	3	4	5	6	7	8	9	10	11	12	13	14
EXT +	EXT -	GND	Light	+13.75	GND	Ph1	Ph2	Ph+	Pb	GND	Stop	Open	Close

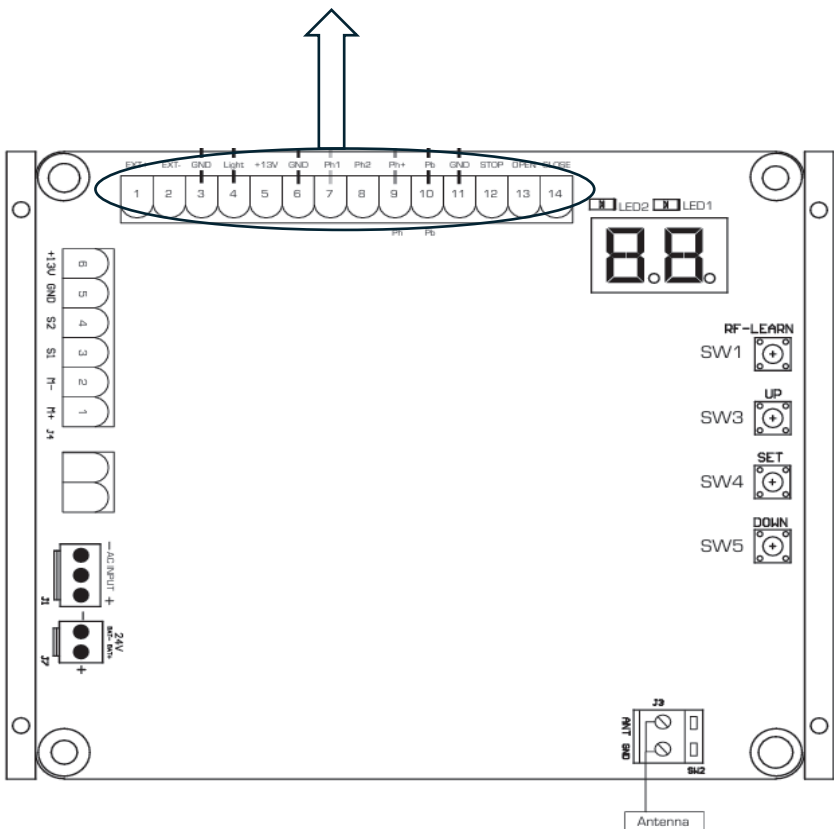

A3 Motor connection with Backup battery

