

ACCESS CONTROL

AC290SACK USER MANUAL



System Components



Proximity and Keypad Reader



- 1 x Hex Key
- 4 x Plastic wall plug
- 4 x Countersunk screws
- 1 x Diode and 1 x Capacitor

Contents

Installation. 4

Wiring Example 5

Advanced Programming Guide

 How to set the length of the master Pin. 6

 How to set-up Access Pin Number and Tags 6-7

 How to set-up Tags in batches 7-8

 Deleting Access Pin or Tag 8

 Changing Programming Pin 9

 Clear all Pin and Tag Data 9

 Default to Factory Settings 10

 Lock 1 Output Operating Time. 10

 Enable & Disable backlight 11

 Enable "Buzzer" Function 11

 Enable 'Tamper Alarm' facility 12

 Access Pin Number for Lock 2 Output 12

 Deleting Access Pin for Lock 2 13

 Lock Output Operating Time for Lock 2 Output 13

System setup record 14-15

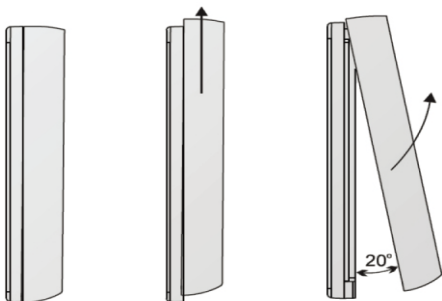
User Guide 16

Technical Specification 16

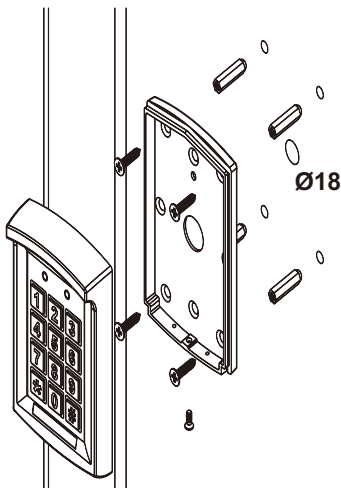
Installation



Release hex screw from the bottom of the keypad



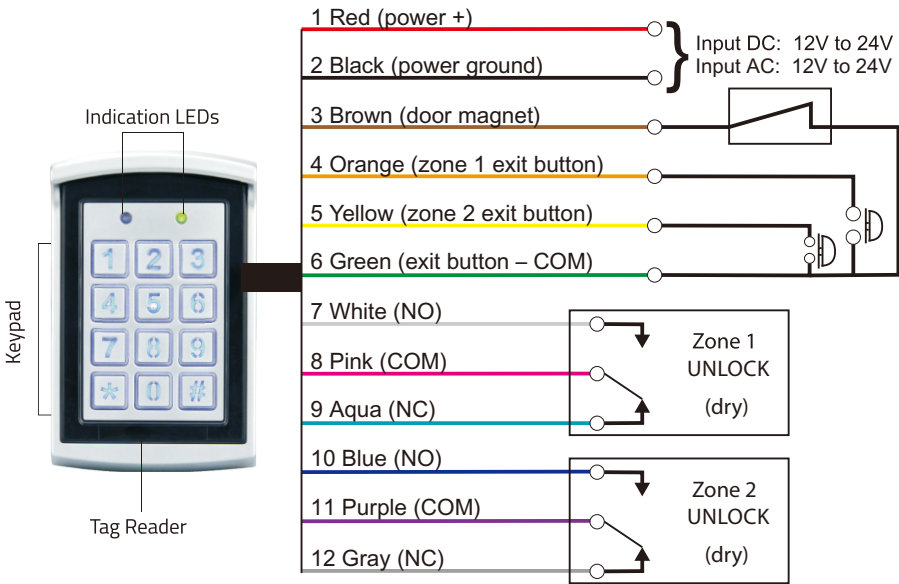
(Side View)
Push the keypad up to release from mount plate



Thread system cable through the cable entry hole then make the system connections (as per the wiring diagram), mount the bracket to the surface and slide the keypad to the mountplate, re-fit the hex screw to secure into position.

Note: if using more than one keypad, ensure that the keypads are mounted a minimum 185cm apart

Wiring Example



How to set-up Access Pin Number and Tags

 
Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	Long Tone
2	Enter a starting location number 0 0 0 ~ 9 9 9	Double Tone
3	? ? ? ? Enter a 4 digit pin (1234 not be used)	Long Tone
4	 Present the tags	Tone
5	# # To end programming	

How to set the length of the master Pin.

 
Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	Long Tone
2	* 9	
3	0 4	Long Tone
4	Enter number of digital 2-6	Long Tone
5	# # To end programming	

Note: When the length of the master code is changed, all existing Pin and Tag will be deleted.

How to set-up Access Pin Number

 
Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 9	
3	0 2	 Long Tone
4	Enter a starting location number 0 0 0 ~ 9 9 9	 Double Tone
5	? ? ? ? Enter a 4 digit pin (1234 not be used)	 Long Tone
6	# # To end programming	

How to set-up Tags in batches (Normal EM125KHz cards)

Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 9	
3	0 1	 Long Tone
4	Enter a starting unused location number * 0 0 0 ~ 9 9 9	 Long Tone
5	? ? ? Enter 3-digit number as quantity of tags to be registered	 Tone
6	 Present all the tags one by one	 Tone
7	All tags will be auto register # # To end programming	

*Each tag will use up a location number (the locations must)

How to set-up Tags in batches (Tags in consecutive numbers)

 
 
Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 9	
3	0 5	 Long Tone
4	Enter an unused location number* 0 0 0 ~ 9 9 9	 Long Tone
5	? ? ? Enter 3-digit number as quantity of tags to be registered	 Tone
6	 Present the tag with the lowest serial number	 Tone
7	All other batch tags will auto register # # To end programming	

*Each tag will use up a location number

Deleting Access Pin or Tag

Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	Enter the location number of tag/pin 0 0 0 ~ 9 9 9	
3	* * To delete	
4	# # To end programming	

Changing Programming Pin

Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 3	
3	? ? ? ? Enter new 4 digit programming pin	
4	? ? ? ? Re-enter new 4 digit programming pin	 Long Tone
5	# # To end programming	

 
Note; To access keypad's programming mode, the 4 digit programming code is entered in twice

If forgot the password, turn off the power, press and hold button

 
#

, connect power again until Bi-sound is heard, the password will be reset to default one 1234

 
Clear all Pin and Tag Data

Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 8	
3	8 8	 Long Tone
4	# # To end programming	

Default to Factory Settings

 
Step Number	Action	Keypad Indication
1	Enter Programming 12341234 (Default)	 Long Tone
2	*8	
3	99	 Long Tone
4	# # To end programming	

Lock 1 Output Operating Time

Step Number	Action	Keypad Indication
1	Enter Programming 12341234 (Default)	 Long Tone
2	*1	
3	Enter number of seconds 00 or 1-99 ? ?	 Long Tone
4	# # To end programming	

 
I.e.If setting lock-time as 00 mean, Swipe card or input password once open the door, swipe card or input password again close the door.

Enable 'Tamper Alarm' facility

 
 
Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 6	
3	0 2 To enable 0 1 To disable	 Long Tone
4	# # To end programming	

Tamper alarm activates the keypad's internal buzzer and 'door bell' output if the light sensor is exposed

 
Access Pin Number for Lock 2 Output

Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 9	
3	0 3	 Long Tone
4	Enter an unused location number 0 0 ~ 0 9	 Double Tone
5	? ? ? ? Enter a 4 digit pin (1234 should not be used)	 Long Tone
6	# # To end programming	

Deleting Access Pin for Lock 2

Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 4	
3	Enter the location number of pin 0 0 ~ 0 9	
4	* * To delete	
5	# # To end programming	

Lock Output Operating Time for Lock 2 Output

Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 5	
3	Enter number of seconds 00 or 01-99 ? ?	 Long Tone
4	# # To end programming	

I.e.If setting lock-time as 00 mean, Swipe card or input password once open the door, swipe card or input password again close the door.

To assist in future programming, it is recommended that a record is made of the system setup.

[illegible]

record is made of the system setup.

[illegible]

User Guide

To release Lock 1

 
(A)
Enter a programmed
Access Pin number



(B)
Present a
registered tag



To access programming mode



Technical Specification

DC input	12 - 24volts
AC input	12 - 24volts
Standby current	80mA
Operating current (without lock)	110mA

Working temperature	-20c to +50c
Reader frequency	125KHz
IP rating	65
Dimension	120 x 76 x 28mm