

## TMT Boxer Motor Accessories Connection


Important:

- Disconnect Power to the motor before commencing work.
- This information is for gate technician.


- Safety Beam – (Essential)
  - Avoiding gate crashing into Vehicle
- Wired Keypad
- Wireless Keypad
- LED Flashing Light
- Backup Battery
  - Gate remains operational during power failure


TMT Boxer Motor Connection with Safety Beam

Receiver



Transmitter






Transmitter can be connected to terminals 5 and 6.

Or

operate by 2 x AA batteries



- Select jumper accordingly

1	2	3	4	5	6	7	8	9	10	11	12	13	14
EXT +	EXT -	GND	Light	+13.75	GND	Ph1	Ph2	Ph+	Pb	GND	Stop	Open	Close

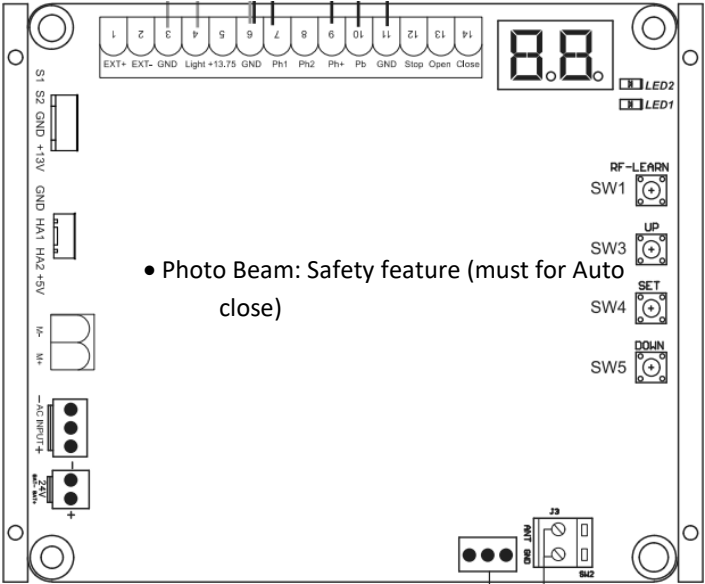


• Photo Beam: Safety feature (must for Auto close)

## TMT Boxer Motor Connection with WIRED Keypad

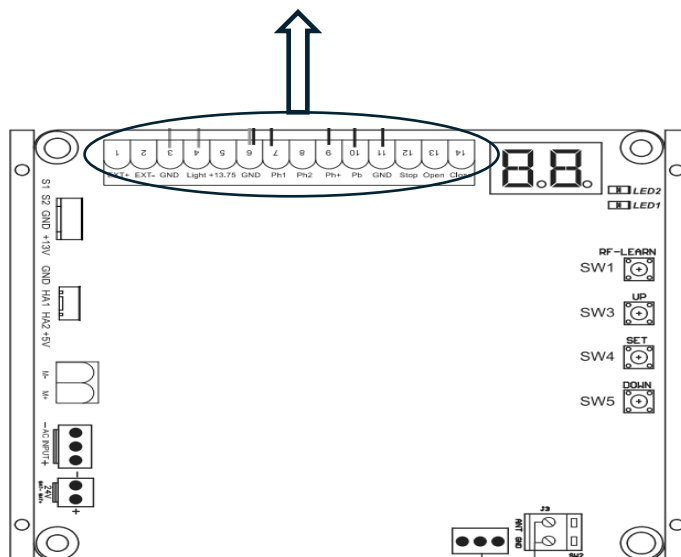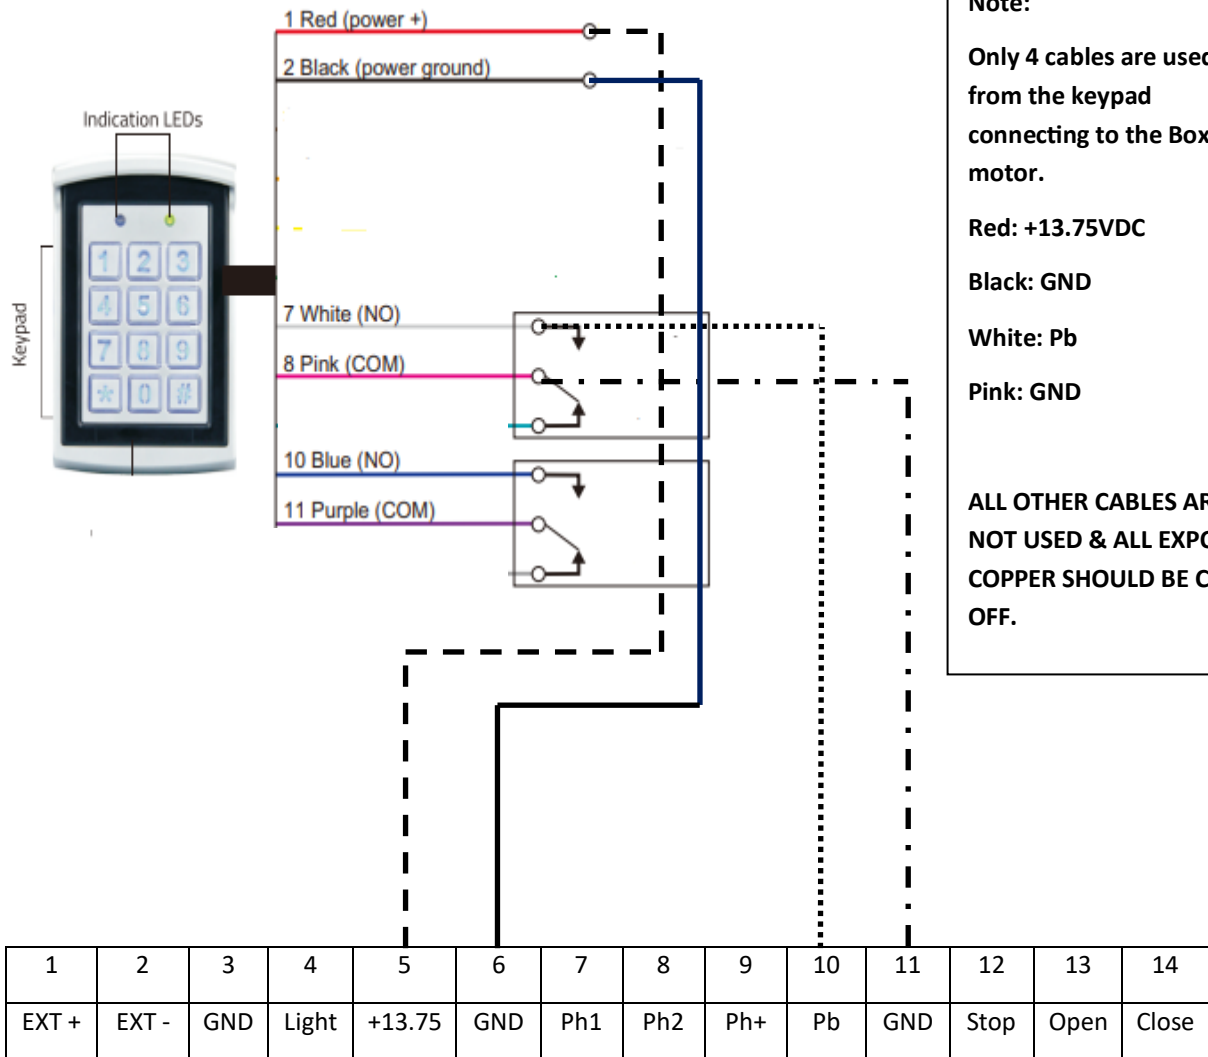

TMT Boxer Motor Connection with External Receiver for Wireless Keypad

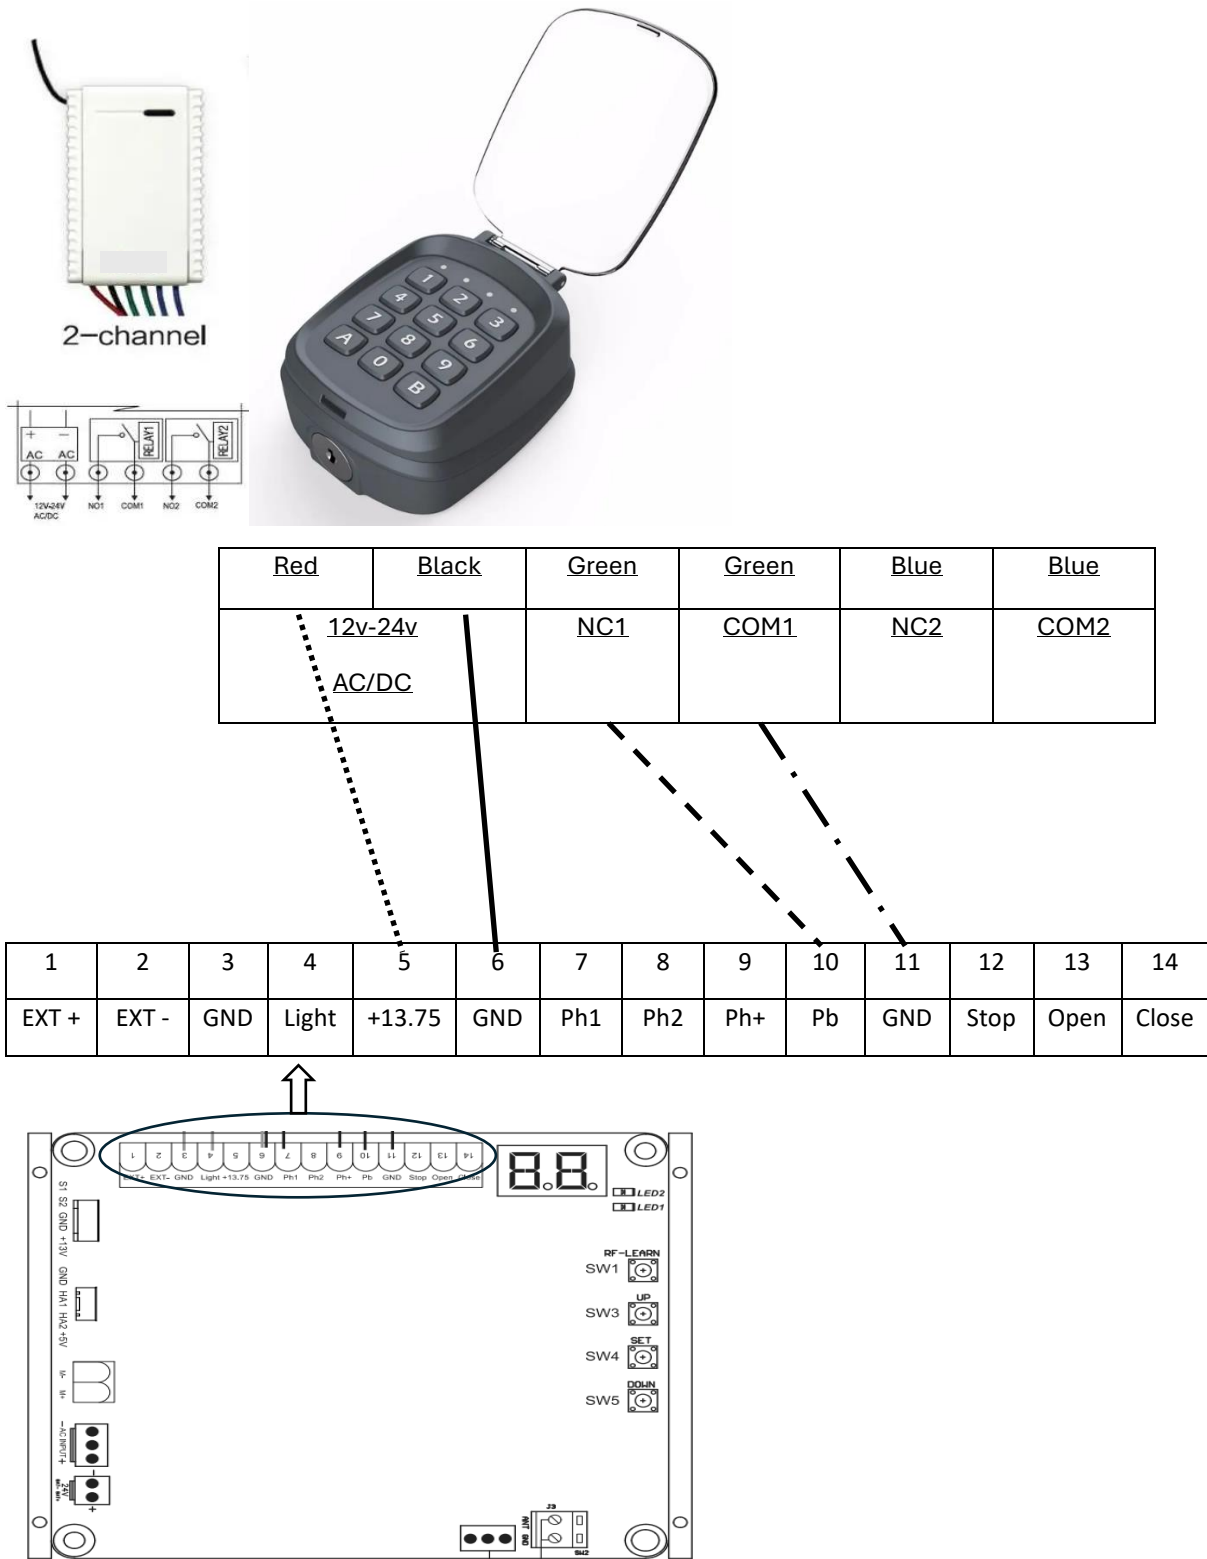

## TMT Boxer Motor Connection with Backup Battery

